

BBC Master AIV

VFS Cartridge User Instructions

Before switching on any of the system components, ensure that the AIV VFS cartridge is inserted in one of the cartridge sockets above the numerical keypad on the Master 128. (See page 153 of the Master Welcome Guide if you are not sure how to do this).

Note that if you wish to use the Auto-boot option mentioned in the User Guide, you will have to identify the ROM socket where the VFS ROM has been inserted. You should check which one this is (after inserting the cartridge and switching on) by typing ***ROMS**. **Acorn VFS** will be shown at either **ROM 0, 1, 2** or **3**. It is this number you should use in the ***CONFIGURE FILE** command mentioned in the Auto-boot section. (Note that **FILE 8** is no longer valid when the VFS ROM is being inserted from a cartridge).

If **UNPLUGGED** appears after **Acorn VFS** in the ROM position shown under ***ROMS**, use ***INSERT <ROM position>** to enable the computer to address the VFS ROM.